

STAR WARS


POWERED BY



x1 ALKALINE BATTERY REQUIRED
1.5VAA DEMO BATTERY INCLUDED

AGES
4+

Anakin™ to Darth Vader™

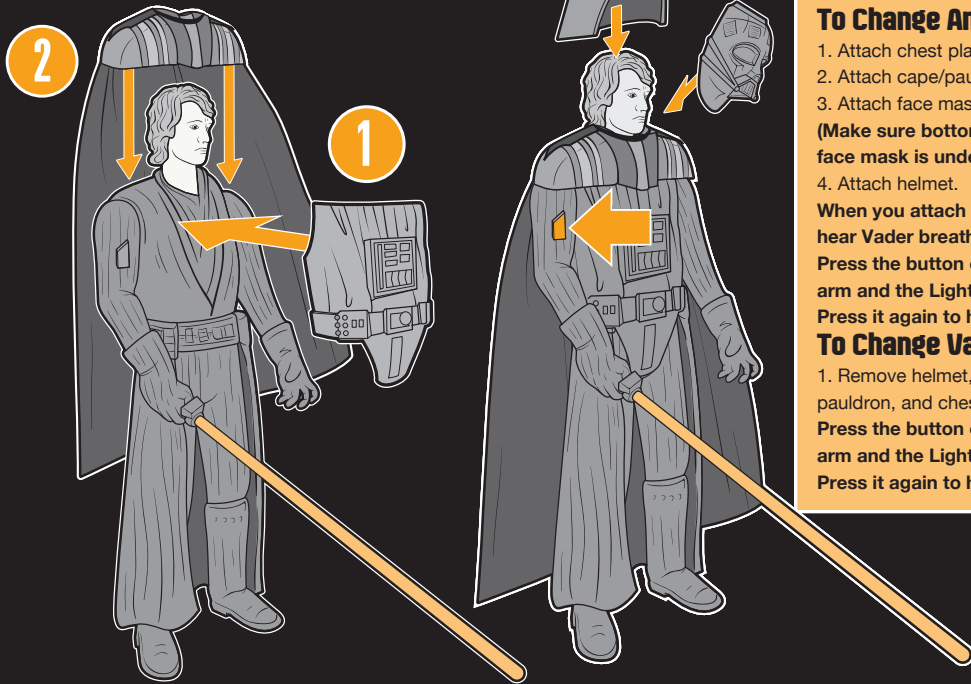

Re-create the rise of Darth Vader – the evil Lord of the Sith!

To Change Anakin to Vader:

1. Attach chest plate.
2. Attach cape/pauldron.
3. Attach face mask.
(Make sure bottom of face mask is under pauldron.)
4. Attach helmet.

When you attach the helmet, you will hear Vader breathing sounds.
Press the button on the figure's right arm and the Lightsaber will light up red.
Press it again to hear Vader sayings.

To Change Vader to Anakin:

1. Remove helmet, face mask, cape and pauldron, and chest plate.
Press the button on the figure's right arm and the Lightsaber will light up blue.
Press it again to hear Anakin sayings.



TO REPLACE BATTERY:

Phillips/cross head screwdriver (not included) needed to replace battery. Remove skirt. Loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Discard battery. Insert 1 x 1.5V AA alkaline battery (not included). Replace cover and tighten screw. Replace skirt.

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. TO AVOID BATTERY LEAKAGE

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
 - Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - Remove exhausted or dead batteries from the product.
 - Remove batteries if product is not to be played with for a long time.
 - Do not short-circuit the supply terminals.
- f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment.

Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

A2177

Product and colors may vary.

Duracell and its logo are trademarks of Procter & Gamble and are used with permission. © 2013 Procter & Gamble. All rights reserved.

© 2013 Lucasfilm Ltd. & ® or TM where indicated.

All rights reserved.

®* and/or TM* & © 2013 Hasbro.

All Rights Reserved. TM & ® denote U.S. Trademarks.



PN# 7358940000