

# STAR WARS

## DARTH VADER™ VOICE CHANGER HELMET

This toy is packaged in a “try me” mode. Move switch from “TRY ME” to “ON” position for full feature activation. When helmet is not in use, slide switch to “OFF” to help conserve battery life.

 **x3** 1.5VAA  
**ALKALINE BATTERIES REQUIRED**  
DEMO BATTERIES INCLUDED

**AGES 5+**

 
 


### VOICE CHANGER BUTTON

Press this button to sound like DARTH VADER when you speak.

Fit the horizontal strap around your child's head.

Adjust the vertical strap so that your child can see through the eyeholes. Attach the vertical strap together to fasten the straps in place.

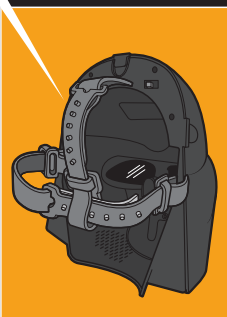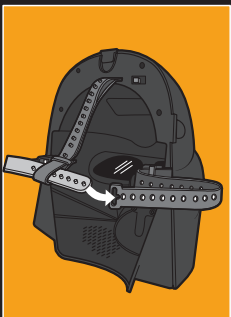

### SAYINGS BUTTON

Press this button to hear Darth Vader sayings and breathing sounds.

#### THE SAYINGS ARE:

You don't know the power of the dark side.

Don't make me destroy you.

 
Impressive... most impressive.

I am your father.

Join me and together we can rule the galaxy.


You have failed me for the last time.

*(Also makes breathing sounds.)*

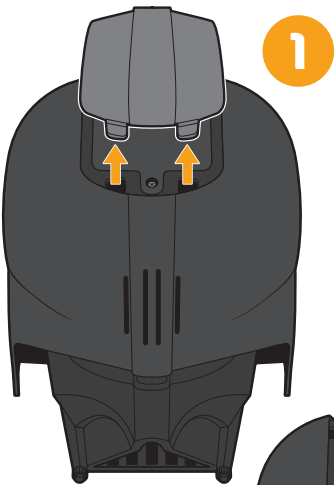

## TO REPLACE BATTERIES:

 Loosen screw in battery compartment door with a Phillips/cross head screwdriver (not included). Remove door. Remove and discard demo batteries. Insert 3 x 1.5V "AA" size alkaline batteries. Replace door, and tighten screw.

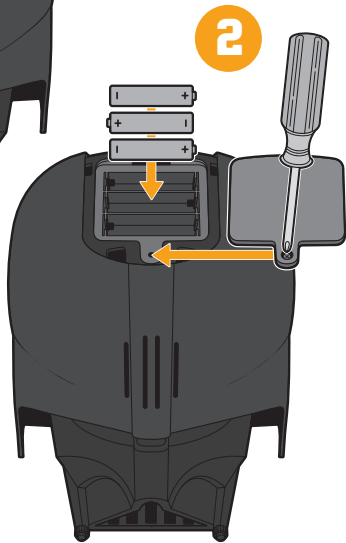

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

#### 1. TO AVOID BATTERY LEAKAGE

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

#### FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



A3231

Product and colors may vary.

© 2013 Lucasfilm Ltd. & © or TM where indicated. All rights reserved.

®\* and/or TM\* & © 2013 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks

PN 7362820000