 

# Quick Start Guide: XRF

The Fusion controller has been updated! This guide will help acquaint you with the new features and show you how easy it is to connect your heat press to the cloud. Please read all accompanying safety instructions!

## The Home Screen



 
If a preset has multiple steps, your position is shown here; tap an empty circle to jump to that preset step

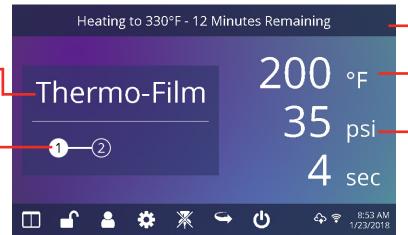


The status bar provides helpful information and shows you what's going on with your heat press

Current temperature and pressure values are displayed here; tap to set target values for temperature, pressure and time

### **Taskbar Buttons and Functions**



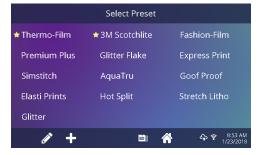

Tap to configure your heat press



 
Managers (default password: "M") see all available setup options, while Users can access a limited set

While setting target values, tap the status bar to quickly jump to a value



While setting target values, tap the status bar to quickly jump to a value

Tap a preset to select it



Tap to create a new preset

Managers can lock heat press controls so Users cannot change settings

Create and edit press Managers and Users to control access to settings; press statistics are recorded for cloud-synced users

Place the heat press into standby mode to enable scheduled automatic heat-up (see Auto-On/Off in Setup)

Tap to toggle tack mode:



Tack mode OFF: press prints until time counts down to zero Tack mode ON: press prints until print buttons are released Tap to cycle through shuttle modes



Shuttle automatically after each press, or by foot pedal

Shuttle by foot pedal only

Disable air-operated shuttle

Note: a preset with "auto shuttle" disabled will override this setting



Press is connected to WIFI



Press is connected to the cloud

# Quick Start Guide: XRF

The Fusion controller has been updated! This guide will help acquaint you with the new features and show you how easy it is to connect your heat press to the cloud. Please read all accompanying safety instructions!


## **Connecting to the Cloud**

#### 1. Create your account


1a. Using a phone or computer, browse to https://iq.hotronix.com and click "Create Account"

CREATE ACCOUNT

1b. Type in your name and email, select a password and sign up

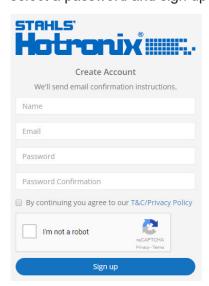

 1c. Click the confirmation link in the email you receive



Your account has been created!

### 2. Register a Heat Press


2a. Browse to https://iq.hotronix.com and click "Manage Heat Presses"



2b. Click "+New Heat Press"



2c. Enter press type, serial number and name your press if desired

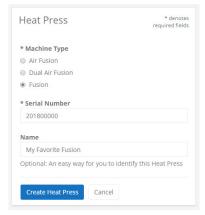

2d. Click "Create Heat Press" and note the verification code given



2e. On your heat press, enter WIFI settings and connect to your WIFI router or mobile hotspot



2e. On your heat press, enter cloud settings and enter the verification code given by the website



Your heat press has been registered!

### 3. Create & Assign Users

3a. Browse to https://iq.hotronix.com and click "Manage Operators"



 
3b. Click "+New User"



- 3c. Enter a name and select a privilege level. Managers can access all press settings while Users can access a limited set. Managers can have a password.
- 3d. Select your new user and click "Assign Machines" in the sidebar



3e. Select a machine and click "Assign"



3f. On your heat press, enter cloud settings and tap "Manual Sync"



The Reports page will now show any impressions made by these Users!