

DR4 Rugged Handheld Computer



Quick Start Guide


The basic package contents

- DR4 Terminal
- Battery
- Hand Strap


Optional accessories

- Single Slot USB Cradle
- USB Com & Charging Cable
- Holster, Detachable Belt Hoop
- Half Rubber Boot
- AC Power Supply
- Standard Battery 3.6v 3200mAh
- Extended Life Battery (Requires Door)
- Extended Life Battery Door

Product View (Left / Right View)

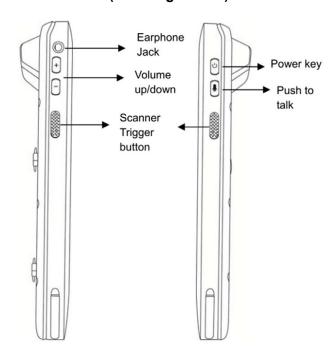

Product View (Front / Rear View)

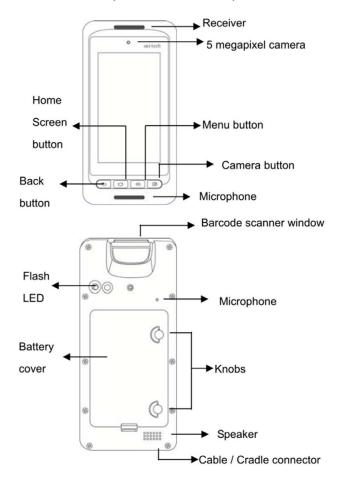



Installing the Battery

- 1. Loosen the two knobs on the battery cover by turning counter clockwise. Pull the two knobs up to remove the battery cover.
- 2. Slide and position the battery pack, making sure the battery contacts are aligned with the contacts in the compartment.
- 3. Use your thumb to snap the battery in place.
- 4. Put back the battery cover.
- 5. Tighten the two knobs on the battery cover by turning clockwise.

Turning on the terminal for the first time

After you have initially charged your device for approximately 24 hours, the device is ready to be used. You can now start up your device. You can then set up the languages, WiFi setting, and date and time.

After that, you can charge the terminal for 4 hours to recharge the battery to full capacity. Charge the terminal using the USB charging cable or the charging cradle.

Power-On Button


Turn ON your device by pressing the power button on the right side of the terminal.

CAUTION!

- To ensure the unit is working properly, please keep all connectors away from prolonged exposure to contaminants such as dust, grease, mud, and water, as this may cause issues such as losing communication, short circuiting or overheating.
- If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuiting.

Using the Micro SD/ Micro SIM Card

The DR4 has Micro SD/ two Micro SIM card slots inside the battery compartment.

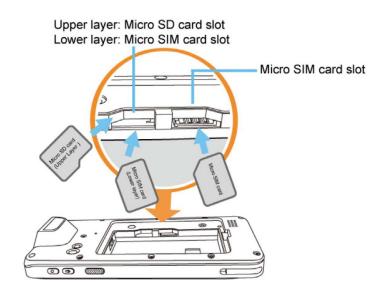

Rev. 10/2019