STAR WARS THE MANDALORIAN

OPERATION

F1256

6+ | 1+

Adult assembly required.

CONTENTS

Gameboard and tweezers • 11 plastic objects • storage tray

STOP THE CHILD'S MISCHIEF!

The bounty hunter's mysterious asset, The Child, cannot resist grabbing objects such as **a frog**, **a cup of broth**, and **a mudhorn egg** whenever it is left unsupervised. Can you retrieve the objects without setting off the buzzer?!

THE FIRST TIME YOU PLAY

1. Insert batteries as shown, right.
2. Carefully remove the objects from the plastic frame. If needed, use an emery board or sandpaper to remove the excess plastic from the game pieces.
3. Remove the tweezers by pressing down on the metal end and sliding them out from under the plastic tab on the gameboard.
4. Attach the storage tray to the underside of the gameboard by sliding the legs on the tray under the tabs on the gameboard.



GET READY!

1. Drop each object into its matching space on the gameboard.
2. Place the tweezers within reach of all players.

THIS IS THE WAY...TO PLAY!

The youngest player goes first. Play then moves to the left.

ON YOUR TURN

Choose an object and use the tweezers to try to remove it without touching the metal sides of the space.

"A COMPLICATED PROFESSION"
If the tweezers touch the sides, you'll get buzzed! Leave the object in its space and give the tweezers to the player on your left.


"YOU ARE THE BEST IN THE PARSEC"
If you remove the object without getting buzzed, you get to keep it! Place it in front of you and give the tweezers to the player on your left.

WIN!

The game ends when all of the objects have been removed. The player with the most wins! In the event of a tie, set up the game again and keep playing until there's a clear winner!

SOLO PLAY

Are you the only person who can stop The Child's mischief? Play as described, left, and see how many tries it takes you to retrieve all the objects from The Child!

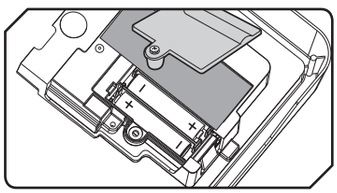

1.5V AA / LR6 x2

TO INSERT BATTERIES:
Use a crosshead screwdriver (not included).

IMPORTANT: BATTERY INFORMATION

Retain this information for future reference. Batteries should be replaced by an adult.

⚠ CAUTION:

TO AVOID BATTERY LEAKAGE

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in your household waste bin.

© & ™ Lucasfilm Ltd. OPERATION and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. © 2020 Hasbro. U.S. Pat. No. 7988561.

Manufactured by: Hasbro SA, Rue Emile-Boéchat 31, 2800 Delémont CH. Represented by: Hasbro, De Entree 240, 1101 EE Amsterdam, NL. Consumer Services: Hasbro UK Ltd., PO Box 43 Newport NP19 4YD, UK. Tel.: 00800 22427276. Consumer_affairs@hasbro.co.uk

0420**F1256**102

PARENTS:

STARWARS.COM | STARWARS.HASBRO.COM

Disney

Hasbro Gaming