

PRE-STEPS

You will want two or more people to assemble your sauna.

Unpack each wall segment from the shipping material. Stage each wall segment in the room you will be assembling the unit.



230V, 1250W

3m cord exits from back left of roof. It is important when installing the dedicated circuit for your unit that you include a circuit breaker with integrated ground fault interruption or combination ground fault interruption and arc fault interruption.


See USER MANUAL or spec sheet for additional specs.

STEP '

- 1.1 Attach the feet pegs A with supplied Allen wrench and bolts 2 to the underside of floor E.
- 1.2 Cut the zip ties holding the floor grate, the fabric will adhere to the Velcro on the underside of the grate.

TIP: One side of the fabric adheres better.

NOTE: Make sure the floor panel is on a surface that is perfectly level and relatively smooth. Failure to do so can cause the door to not close all the way in the later steps.

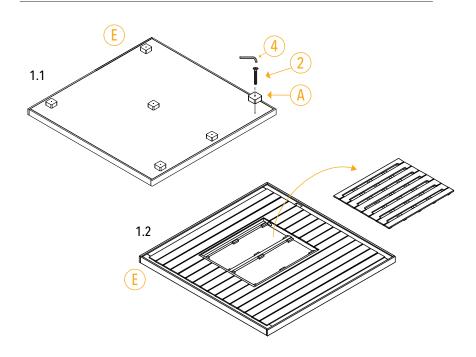

STEP 2


NOTE: Before you begin installing the walls, be sure you have at least:

- 203 mm between the back of the sauna and walls.
- 305 mm in gap from the top of the sauna to the ceiling.
- Place the sauna next to the wall power outlet to ensure you have access to the wall power socket outlet to cut the power to the unit if required.

In this step, make sure one person is holding the wall while the other helps balance it and press it in place.

 (H)


Place the back wall $\stackrel{\textstyle ullet}{\textstyle \mbox{H}}$ on the back of the floor panel $\stackrel{\textstyle ar{\hbox{\it E}}}{\textstyle \mbox{\it E}}$. Be sure you have two people assisting with this step. This is the side with the sauna information label on the bottom edge.

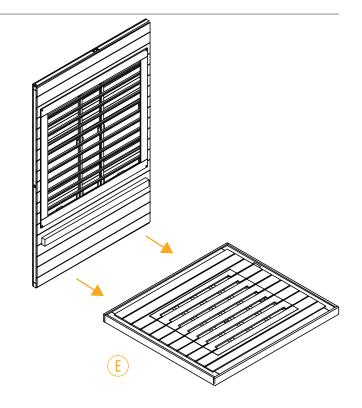



STEP 3


Place right wall on the right side of floor panel E. This wall panel should sit flush once properly seated. Make sure no gaps are visible in the corner of the two walls as you insert it. It should be inserted flush.

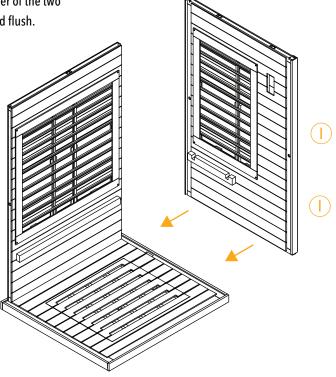

STEP 4

As you insert each wall segment, you will insert the U-clips 3 in the pre-drilled holes in the corner. This will keep the walls sealed together.

The front wall will be inserted next. Be careful of the glass door and panel as you insert the wall.

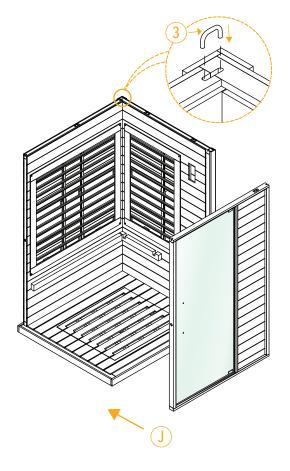




STEP 5


After securing the U-clip 3, the left wall 6 will be the last to be inserted. Make sure it is flush and no gaps are showing in the corners.

NOTE: If you ever have trouble getting a U-clip to slide in, this can be resolved by tapping it with a hammer.

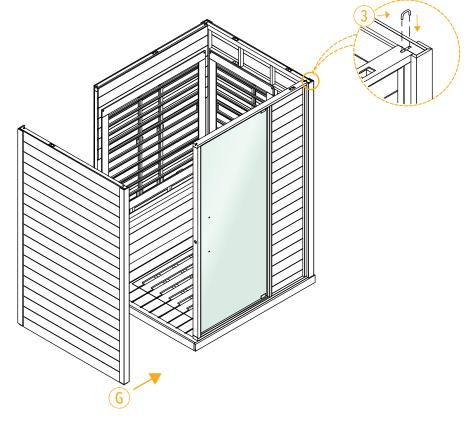


STEP 6


Once all the U-clips have been inserted in the corners, the next step will be to place the roof F on top. Make sure the side the main power cord receptacle faces the back.

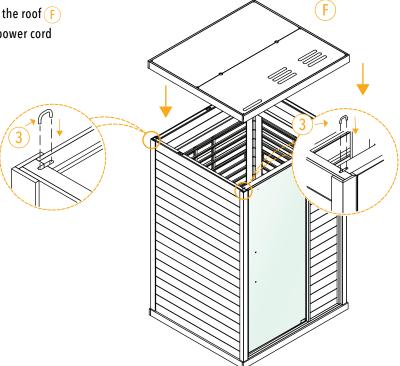



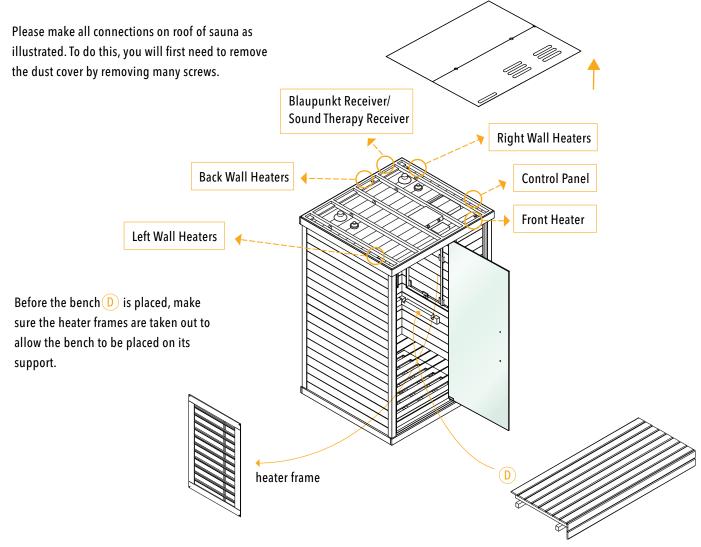

NOTE: The right wall of the sauna includes wire connections underneath which will lead into the floor panel (see illustration 7.2 below).

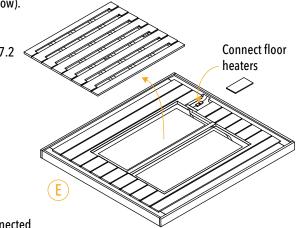


The floor heaters will need to be connected to the right wall wires. The diagram above shows where the connection is made. You will need to remove the floor grate and a small hatch covering the harness.



With the bench installed, the heater panel frames can be inserted back into their respective walls.

The door handles come with the hardware and can easily be screwed right in. A second person should hold the handle while the other screws the bolts in with the Allen wrench. The dust cover should also be replaced.

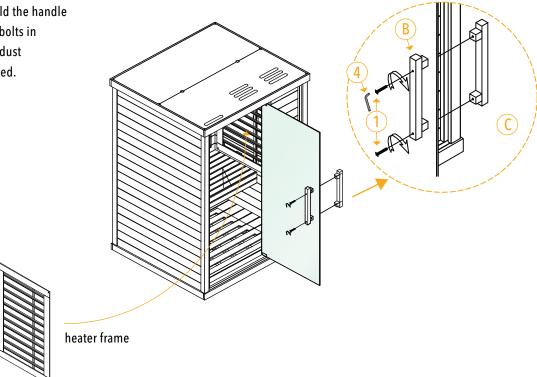

CONGRATULATIONS, your sauna is now ready to enjoy! If you have any queries, please call **Sunlighten Customer Support** at **0330.808.1203.**

sunlighten