

1

# PRE-STEPS

- Un-pack each wall segment from the shipping material.
- Stage each wall segment in the room you will be assembling the unit.



240V, 2551 watts. Dedicated 15A circuit and 15A power socket protected by a 16A RCBO installed in the meter box.

Minimum 2.5mm cable required for circuit; 2.5m cord exists from back left of roof.\*

## See USER MANUAL


\* Failure to do so will void your sauna's warranty and customer will assume liability for any electrical damages to the sauna itself or the residence/business in which the sauna is installed.

### STEP '


- Attach the feet pegs A with supplied Allen wrench and bolts 2 to the underside of floor E (see illustration 1.1).
- Cut the zip ties holding the floor grate, the fabric will adhere to the Velcro on the underside of the grate (see illustration 1.2).

TIP: One side of the fabric adheres better

**NOTE:** Make sure the floor panel is on a surface that is perfectly level & relatively smooth.

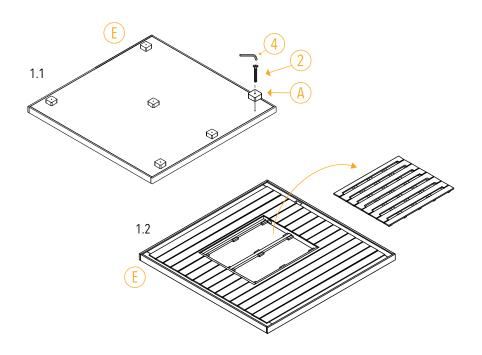

- Place the back wall (H) on the back of the floor panel (E).
- Be sure you have two people assisting with this step.
  This is the side with the sauna information label on the bottom edge.

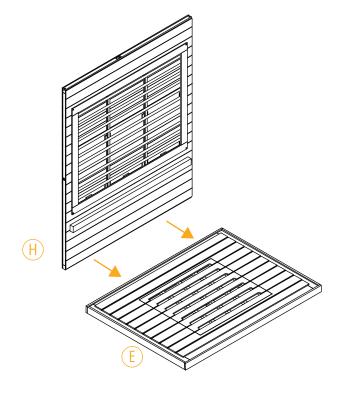





### STEP 3

- Place right wall on the right side of floor panel E.
  This wall panel should sit flush once properly seated.
- Make sure no gaps are visible in the corner of the two walls as you insert it. It should be inserted flush.


NOTE: The right wall of the sauna includes wire connections underneath which will lead into the floor panel (see illustration 3.2 below).

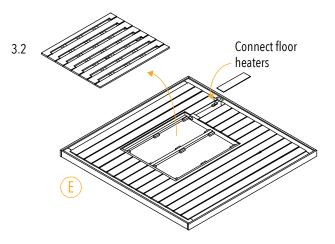

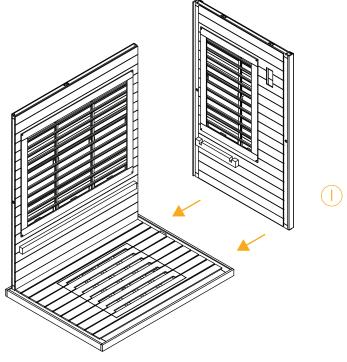

- If you have not yet done so, the floor heaters will need to be connected to the right wall wires.
   The diagram to the left shows where the connection is made.
- You will need to remove the floor grate and a small hatch covering the harness.

- As you insert each wall segment, you will insert the U-clips 3 in the pre-drilled holes in the corner.
   This will keep the walls sealed together.
- The front wall J will be inserted next. Be careful of the glass door & panel as you insert the wall.

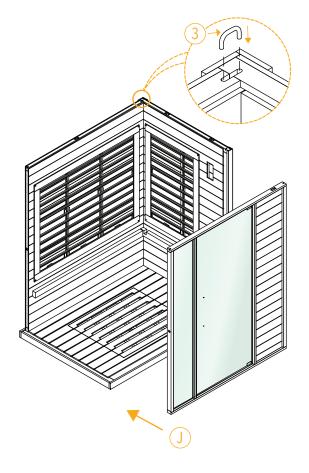





#### **STEP** 1

 After securing the U-clip 3, the left wall 6 will be the last to be inserted. Make sure it is flush and no gaps are showing in the corners.


**NOTE**: If you ever have trouble getting a U-clip to slide in, this can be resolved by tapping it with a hammer.

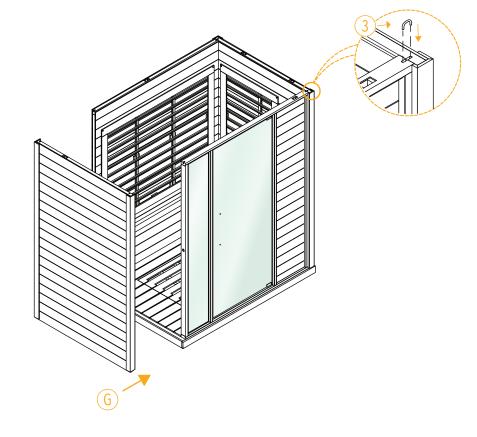


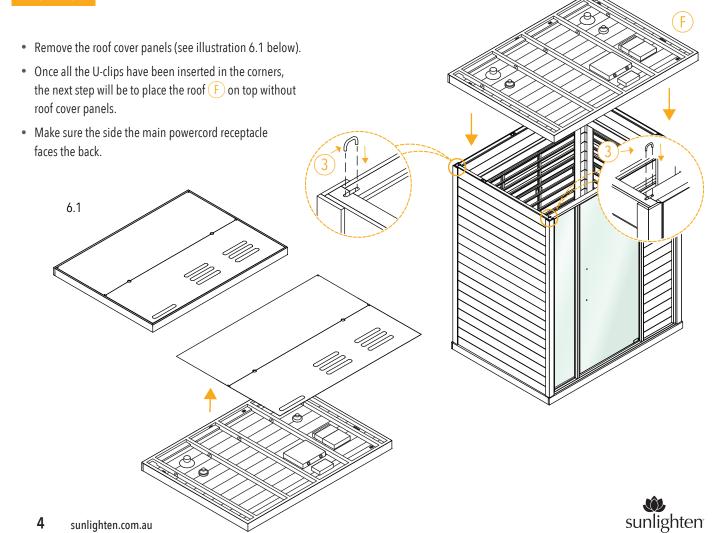

### STEP 7

- Please make all connections on the roof of the sauna as illustrated
- Connect sauna to external power.
- Turn on the power to sauna (see illustration 7.1 below).
- Check all of the heaters are working by placing your hand against the heater cover to feel the heat.
- Check the radio is operating by quickly tapping the SRC button.
- Check the lights turn on using the control panel (see illustration 7.1 below).
- If all electronics are working, turn them off and turn off the power to the sauna.
- · Replace the roof panels.
- In the event a heater is not working, unplug the connection and firmly plug back in. Then re-test with power on.
- If you require any support, please contact our Technical Service team.

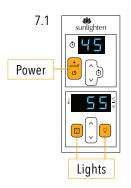

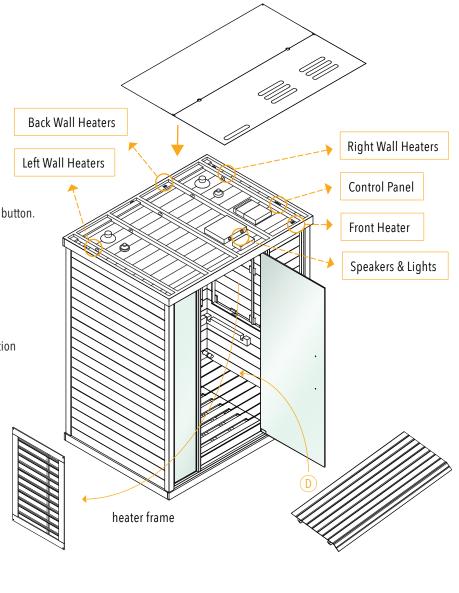

- With the bench installed, the heater panel frames can be inserted back into their respectable walls.
- The door handles come with the hardware and can easily be screwed right in.
- A second person should hold the handle while the other screws the bolts in with the Allen wrench.
- The dust cover should also be replaced.

